


Instructions for Setting Eyelets with a Hand Closing Tool (HCT) for 50mm & 66mm Curtain Eyelets

Important Health & Safety Advice

In accordance with the Health and Safety at Work Act 1974, all precautions have been taken as far as is reasonably practicable to ensure that this tool is safe and without risk when used correctly.

Gloves and safety glasses must be worn when using this tool.

Only strike the tool with a rawhide mallet (size no 3 available through your tool supplier)

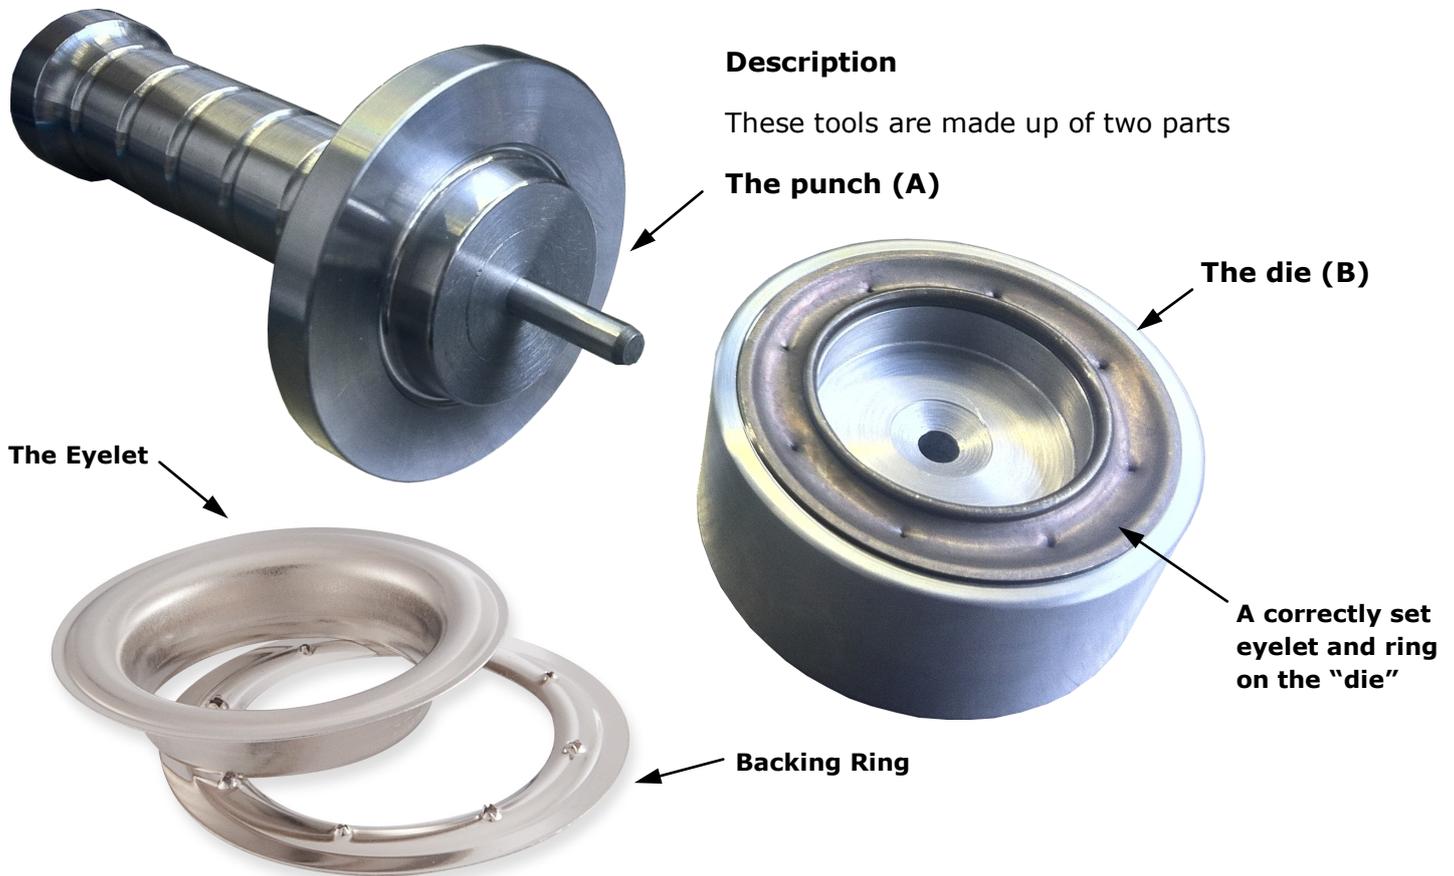

Instructions

1. Mark out and cut holes in your material in the desired position you can use the hole in the ring as a template to mark the hole size and cut out with scissors).
2. Place the die on a sound flat surface.
3. Take an eyelet and place it on to die so the face of the eyelet locates on the top of the die.
4. Place the material you are setting the eyelet in over the eyelet on the die with the face side of the material facing down.
5. Place a ring (prongs facing downward) on top of the material around the barrel of the eyelet.
6. Take the tool punch and insert the end through the eyelet hole and into the body of the die.
7. Holding the punch by the shaft strike the top with a rawhide mallet until the eyelet and ring close tightly around the material and grip it firmly.
8. If the eyelet is not gripping the fabric tightly enough then the eyelet can be struck again until tight.

Please contact your supplier if you require any further assistance